

EN4232MR 32 Zone Multi-Condition Receiver with Relay Outputs Installation and Operation Manual

1 Overview

The EN4232MR receiver allows you to add up to 32 transmitters and 11 outputs to any application, and includes a back tamper for increased tamper security.

Inovonics add-on receivers use Form C relays to allow connection to any hardwired panel or stand-alone wireless application.

The following add-on receivers are available from Inovonics:

Receiver	Alarm Output Relays	Fault Relays	Transmitters Supported
EN4204R	4	1	4
EN4216MR	5	1*	16
EN4232MR	11	1*	32

* At least one relay must be used for faults to ensure the system is supervised. More than one relay may be used, but that will deduct from the number of alarm output relays.

1.1 Installing an Inovonics Security System

An EchoStream survey kit must be used to establish a UL system. The EchoStream survey kit measures the signal strength of high-power repeater and sensor messages to help optimize your EchoStream system.

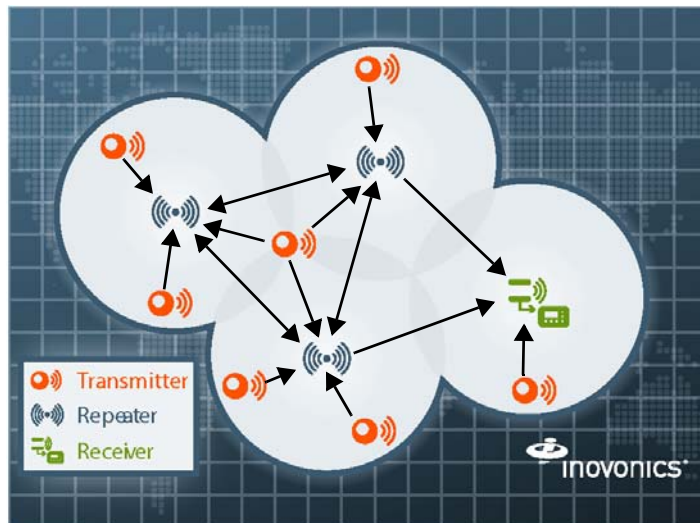


Figure 1 Sample EchoStream System

The EchoStream survey kit provides you with two signal strength measurements: signal level and signal margin.

Signal level: The signal level is the measurement of the overall decibel level of the message.

Signal margin: The signal margin is the measurement of the decibel level of the message, minus the decibel level of any interfering signals.

Inovonics Wireless equipment should be placed within a facility such that all end-devices produce signal margin readings of at least 4 decibels.

Both the signal level and signal margin are measured in decibels. Because signal strength and signal margin are measured on a logarithmic scale, the difference between a decibel level of 3 (Weak) and a decibel level of 4 (Good) is a much larger difference than it would be on a linear scale.

Note: For more information about the EchoStream survey kit, see the *EN/EE7016SK EchoStream® Survey Kit Installation and Operation Manual*.

1.2 Inovonics Contact Information

For product and installation videos visit us at www.inovonics.com/videos or use the QR code below.



If you have any problems with this procedure, contact Inovonics technical services:

- E-mail: support@inovonics.com.
- Phone: (800) 782-2709; (303) 939-9336.

1.3 EN4232MR Front Panel

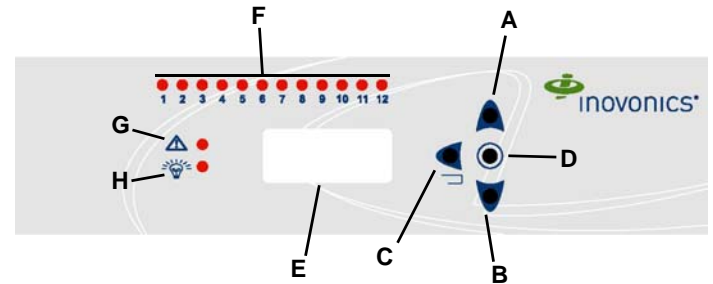


Figure 2 Receiver front panel

A Up button B Down button C Back button D Enter button E LCD display

F Output LEDs G Fault LED H Power LED

Up Button: Scrolls the display up.

Down button: Scrolls the display down.

Back button: Returns display to the previous menu.

Enter button: Selects the currently displayed menu item.

LCD Display: Shows status, event log, and programming information.

Output LEDs: The output LEDs light to indicate an alarm or fault condition at the appropriate output.

Fault LED: The fault LED lights to indicate a transmitter fault condition; either low battery, inactive, line power loss, or tamper.

Power LED: The power LED lights when the EN4232MR is receiving power.

1.4 EN4232MR Internal Components

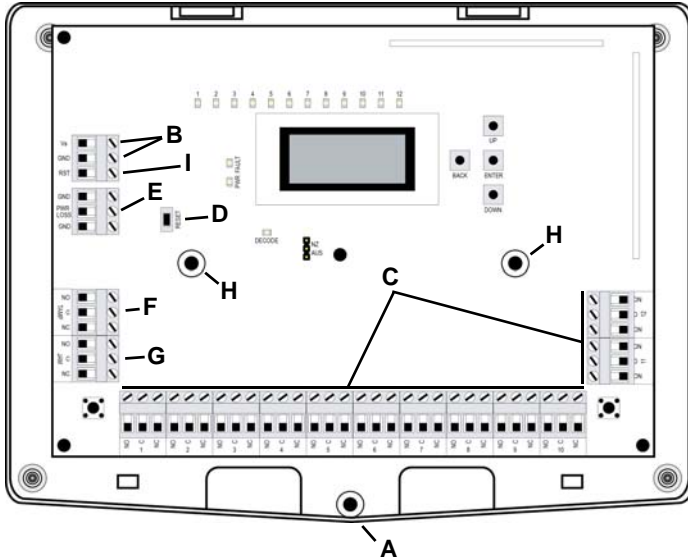


Figure 3 EE4232MR internal components

- A** Housing release screw **B** Power connections **C** Output terminals
- D** Reset button **E** Power loss output **F** Tamper output
- G** Jam output **H** Mounting hole **I** Reset input

Note: The inside cover of the housing includes a wiring diagram.

1.5 What's in the Carton

- Two drywall anchors
- Two mounting screws
- One selection jumper

2 Installation and Startup

2.1 Installation Notes

- These products are designed to be maintained by professional security technicians
- Products are tested for indoor use
- All products should be manually tested weekly

2.2 Power Cabling

Caution: Incorrect connections may cause damage to the unit.

Before beginning startup, you will need to connect power to the receiver. To connect power to the receiver:

1. Use a small screwdriver to press the housing release tabs on the top or bottom of the receiver; separate the housing.
2. Connect power cabling to the Vs and GND connections.
 - The power source must be 11-14 VDC; 500mA. The power supply must be unswitched, uninterrupted, and regulated.
 - Use 14 - 22 gauge wire for all cabling, and ensure torque on the screw terminals does not exceed 7 inch-pounds.
 - For UL installations, wire lengths must not exceed 300 feet.

2.3 Input/Output Cabling

Connect the inputs and outputs per your specific application:

3. Connect cabling to the power loss output. Must be configured for UL installations.
 - The power loss output is a normally closed (N/C) open collector output that opens when the receiver loses power. The receiver operation output is set to the follower output type.
4. Connect cabling to the tamper output. Must be configured for UL installations.
 - The optional tamper output is a relay output that reports receiver case tamper to an external device.
5. Connect cabling to the jam output. Must be configured for UL installations.
 - The optional jam output is a relay output that is active when noise thresholds on all transmission channels remain above a predetermined value for 10 seconds.
6. Connect a momentary switch to the reset input and ground. Must be configured for UL installations.

- The optional reset input circuit permits installation of a remote momentary normally open (N/O) switch to clear faults, unlatch outputs, and reset the receiver to a normal state.
7. Connect cabling to the output terminals. Must be configured for UL installations.

2.4 Mount the Receiver

Caution: Mount the receiver in a location removed from metal. Metal objects (duct work, wire mesh screens, boxes) will reduce RF range.

Note: For UL listed systems containing a UL hold-up switch, the EN4232MR must be located within three feet of a system keypad in a location out of sight from the protected premise.

Note: For UL installations, the EN4232MR must be in the same room as the control panel.

8. Use the provided anchors and screws to mount the receiver in a location accessible for future maintenance, making sure the housing is flush with the wall and the back tamper switch is actuated.
9. After all transmitters have been registered, perform a walk test, activating each transmitter assigned to the receiver and ensuring a good signal.

3 Point Setup and Registration

Each transmitter must setup and registered to a point. Once registered, the transmitters alarm(s) will be mapped to the appropriate alarm output(s).

Following are the transmitters supported by the EN4232MR:

Table 1: EN4232MR Supported Transmitters

Transmitter	Alarm 1	Alarm 2	Alarm 3	Alarm 4
EN1210	Terminal block			
EN1210W	Terminal block	Reed switch		
EN1212	Terminal block 1	Terminal block 2		
EN1215EOL	Terminal block			
EN1215WEOL	Terminal block	Reed switch		
EN1216	Terminal block 1	Terminal block 2		
EN1223S	Button			
EN1223D	Both buttons			
EN1224	Button 1	Button 2	Button 3	Button 4
EN1233/5S EN1235SF	Button			
EN1233/5D EN1235DF	Both buttons			
EN1236D	Left button	Right button	Both buttons	
EN1238D	Either button	Both buttons		
EN1241-60	Activity			
EN1242	Smoke			

Table 1: EN4232MR Supported Transmitters

Transmitter	Alarm 1	Alarm 2	Alarm 3	Alarm 4
EN1247	Glass break			
EN1249	Bill trap			
EN1252	Terminal block 1	Terminal block 2		
EN1260	Motion			
EN1261HT	Motion			
EN1262	Motion			
EN1265	Motion			

3.1 Factory Configuration Defaults

The EN4232MR arrives with the outputs pre-programmed. If the default programming is sufficient for your site, you do not need setup points. Simply register a transmitter to one of the points.

To register a transmitter to a pre-programmed point:

1. From the EN4232MR start screen, press the enter button to access the receiver's three main menu options.
2. Use the up and down buttons to navigate to the install & service menu; press the enter button.
3. Enter your password to access the install & service menus.
4. Follow the instructions in section 4.5.2 "Register Transmitter" on page 4.

If you do need to setup points, advance to section 3.2 "Program a Point" on page 3.

Table 2: Default Transmitter Programming

Alarm Output	Transmitter Points
1	1, 11, 21, 31
2	2, 12, 22, 32
3	3, 13, 23
4	4, 14, 24
5	5, 15, 25
6	6, 16, 26
7	7, 17, 27
8	8, 18, 28
9	9, 19, 29
10	10, 20, 30

Table 3: Default Trouble Condition Programming

Output/Relay	Condition
11	Tamper
12	Low Battery
12	Supervision Loss/Inactive
12	Line Power Loss

3.2 Program a Point

1. From the EN4232MR start screen, press the enter button to access the receiver's three main menu options.
2. Use the up and down buttons to navigate to the install & service menu; press the enter button.
3. Enter your password to access the install & service menus.
4. Following the instructions in section 4.5.1 "Setup Point" on page 4.

4 32 Zone Multi-Condition Receiver with Relay Outputs Operation and Point Setup Screens

4.1 Menu Tree

POINT STATUS, see 4.3 "Point Status" on page 3.

EVENT LOG, see 4.4 "Event Log" on page 3.

INSTALL & SERVICE, 4.5 "Install & Service" on page 4.

 SETUP POINT, see 4.5.1 "Setup Point" on page 4.

 POINT #

 SUPERVISION TIME

 SECURITY/REPEATER

 ALARM INPUTS

 ALARM OUT

 ALARM OUTPUT TYPE

 INACTIVE OUT/TYPE

 TAMPER OUT/TYPE

 LOW BATTERY OUT/TYPE

 TEXT

 REGISTER

REGISTER TRANSMITTER, see 4.5.2 "Register Transmitter" on page 4.

DELETE POINT, see 4.5.3 "Delete Point" on page 5.

SIGNAL STRENGTH, see 4.5.4 "Signal Strength" on page 5.

CHANGE PASSWORD, see 4.5.5 "Change Password" on page 5.

FACTORY CONFIG, see 4.5.6 "Factory Config" on page 5.

4.2 EN4232MR Start Screen

The EN4232MR start screen displays alarm and fault information on the LCD display. Points in alarm are displayed as "Alarm", with the point number following. If more than one point is in alarm, the display scrolls through each point. If a point has more than one alarm, the display scrolls through each alarm. Fault conditions are indicated by "Fault" in the LCD display if there is no alarm already displayed, and point numbers are not displayed.

Alarms and faults will only display briefly when the alarm or fault is first received, and then the start screen will return to a ready condition. For detailed alarm and fault information, see section 4.3 "Point Status" on page 3.

4.3 Point Status

The point status menu allows you to view detailed alarm and fault information. Point status information is available without entering a password.

To access the point status menu:

1. From the EN4232MR start screen, press the enter button to access the receiver's three main menus. "Point Status" displays.
2. Press the enter to display point status details.
3. Use the up/down buttons to scroll through the points; press the enter button again to view the outputs the displayed conditions are mapped to.
 - Point status flags are defined as follows: A = Alarm (transmitter only); T = Tamper; B = Low Battery; L = AC loss (repeater only); I = Inactive.

Note: If "--" displays, the displayed condition has been mapped to a null output.

4.4 Event Log

The event log displays the last 50 events that have occurred, whether they be alarms, or tamper or inactive faults. Event log information is available without a password.

1. From the EN4232MR start screen, press enter.

2. Use the up or down buttons to navigate to "Event Log"; press the enter button.
3. Use the up/down buttons to scroll through events.
4. When viewing transmitter events, press enter to see the output the events map to.

Note: No output will be displayed if the event is mapped to a null output.

4.5 Install & Service

Note: The default password is 3446.

The install & service menu is used to reset factory configuration, change password, view signal strength, delete points, register transmitters, and setup points for any of the programmed points.

To access the install & service menu:

1. From the EN4232MR start screen, press the enter button to access the receiver's three main menu options.
2. Use the up and down buttons to navigate to the install & service menu; press the enter button.
3. Enter a password to access install & service menus.

4.5.1 Setup Point

1. From the install & service menu, press enter at the "Setup Point" prompt.
2. Use the up/down buttons to scroll through point numbers; press the enter button to select a point.
 - "Tx Registr'd" displays if a transmitter or repeater is currently registered to this point; "Tx Not Registr'd" displays if no transmitter is registered to this point.
3. Press enter to continue.

Supervision Time: Sets a time limit on missing transmitters.

- The valid range is 0 to 99 hours. The default is 60 minutes. Selecting 0 turns off supervision.

Caution: Turning off supervision can jeopardize the integrity of your system. Inovonics does not recommend turning off supervision. For supervision to function correctly, the supervision time must be set for an interval greater than the transmitter check-in time.

- a. Use the up and down buttons to adjust the supervision time; press the enter button to select.
- b. Use the up and down buttons to toggle between "Hrs" (hours) and "Min" (minutes); press the enter button to select.

Select Security/Repeater: Configures point's alarm and alert messages as either a repeater or a security transmitter.

- a. Use the up and down buttons to choose "Select Security" for a security transmitter or "Select Repeater" for a repeater; press the enter button to select.

1-4 Alarm Inputs: Allows security transmitters with multiple alarm conditions to be assigned a separate alarm point and output type for each individual condition.

- a. Use the up and down buttons to navigate the number of alarm inputs for the transmitter; press the enter to select.

Alarm Out: Maps the security transmitter's alarm condition(s) to alarm outputs.

- a. Use the up/down buttons to scroll through the output numbers. Choosing "--" will disable alarm output.
- b. Press Enter to select the output to use for the alarm condition.

Alarm Output Type: Selects the output type for the alarm condition. The default is follower.

- a. Use the up/down buttons to scroll through the output type options in Table 4; press the enter button to select the desired output option:

Table 4: Output Type Options

Output Type	Description
Follower	The output reflects the transmitter's alarm status.
Latching	The output turns on when activated and remains on until the receiver is reset.
Toggle	The output changes state each time the device sends a new activation. Press the enter button to select. "Inactive" displays when selected. Inactive time prevents output chatter. The valid range is 2.0 to 99.5 seconds, in 0.5 second increments. Use the up and down buttons to navigate.

Table 4: Output Type Options

Output Type	Description
Momentary	Momentary: The output turns on for the programmed duration, then turns off, regardless of the device status. Press the enter button to select. "Moment" displays when selected. This sets the time that the output will stay activated. The valid range 0.5 to 99.5 seconds, in 0.5 second increments. Use the up and down buttons to navigate.

Inactive Out: Maps transmitter/repeater inactivity fault output.

- a. Use the up/down buttons to scroll through the output numbers. Choosing "--" will disable inactivity reporting.

Inactive Output Type: Selects the output type for the inactive condition.

- a. Use the up/down buttons to scroll through the output type options in Table 4; press the enter button to select the desired output option:

Tamper Out: Maps transmitter/repeater tamper fault output.

- a. Use the up/down buttons to scroll through the output numbers. Choosing "--" will disable tamper output.

Tamper Output Type: Selects the output type for the tamper condition.

- a. Use the up/down buttons to scroll through the output type options in Table 4; press the enter button to select the desired output option.

Low Batt Out: Maps transmitter/repeater low battery fault output.

- a. Use the up/down buttons to scroll through the output numbers. Choosing "--" will disable low battery output.

Low Battery Output Type: Selects the output type for the low battery condition.

- a. Use the up/down buttons to scroll through the output type options in Table 4; press the enter button to select the desired output option:

Line Power Loss Out: Maps repeater line power loss fault output.

- a. Use the up/down buttons to scroll through the output numbers. Choosing "--" will disable line power loss output.

Line Power Loss Output Type: Selects the output type for the line power loss condition.

- a. Use the up/down buttons to scroll through the output type options in Table 4; press the enter button to select the desired output option:

Text: Enter eight-character descriptive text for the transmitter/repeater

- a. Use up/down buttons to scroll through the alphanumeric characters; press enter to select and advance to the next character. To select a space, press enter without selecting a digit.

Note: If you do not use all eight characters, you must enter spaces to the end of the line.

- b. When finished, press enter again to complete selection.

Register Transmitter: The register transmitter option allows you to register a transmitter or repeater to the programmed point.

- a. Use the up and down buttons to toggle between "N" for no and "Y" for yes to choose whether or not you wish to register a transmitter/repeater to the point; press enter to select.
- b. Press the transmitter/repeater's reset button at the "Reset Xmitter" prompt.
- c. When "Tx Reg'd" displays, press enter to finish and advance to the next point.
- d. When all transmitters have been registered, press reset on the receiver to clear faults.

Note: A transmitter/repeater can be registered to the point at a later time using the "Register Xmitter" prompt in the install & service menu.

4.5.2 Register Transmitter

The register xmitter option allows you to register a transmitter or repeater.

1. From the install & service menu, use the up and down buttons to navigate to the "Register Xmitter" prompt; press the enter button.
2. Use the up and down buttons to choose the point to which you want to register the transmitter/repeater.
3. Use the up and down buttons to toggle between "N" for no and "Y" for yes to choose whether or not you wish to register a transmitter/repeater to the point; press enter to select.
4. Press the transmitter/repeater's reset button at the "Reset Xmitter" prompt.

4.5.3 Delete Point

The DELETE POINT option allows you to delete transmitter registration information from all registered points, or from a specific point. Programmed point information is not deleted; just the registration identification number associated with the transmitters or repeaters. To delete points:

1. From the install & service menu, use the up and down buttons to navigate to the "Delete Point" prompt; press the enter button.
2. The "Delete All?" prompt displays. Use the up and down buttons to choose "N" for no or "Y" for yes; press enter to select.
3. If you selected no, the "Delete Point" prompt displays. Use the up and down buttons to choose a point to delete; press enter to select.
4. Press the enter button. If there is more than one registered point, then pressing the enter button returns to point selection for deletion; if there are no more registered points, the display returns to the install & service menu.

4.5.4 Signal Strength

The SIGNAL STRENGTH option is used to measure signal strength and troubleshoot installation problems.

1. At the "Signal Strength" prompt, press enter.
 - The first programmed point displays, along with a signal quality of good, weak or no sig.

Note: The point must have an active transmitter associated with it to display signal strength.

2. Use the up/down buttons to scroll through the registered transmitters.
3. Press enter to view level (LV) and margin (MA).
 - Level indicates the overall signal strength; margin indicates the signal strength minus the background noise.

Note: Inovonics recommends a level of four for most installations.

4.5.5 Change Password

Passwords can be up to five digits long. The password is 3446. To change the password:

1. From the install & service menu, press enter at the "Change Password" prompt.
2. Use the up/down buttons to scroll through the digits; press enter to select and advance to the next digit.

Note: Choosing a null as the password will disable the function, allowing users to perform receiver functions and/or change parameters without a password.

3. When finished, press enter again to complete selection.
4. When "Password Changed" displays, press enter to return to the install & service menu.

Caution: Store the new password in a secure place. If the new password is lost, you will not be able to access the receiver without restoring it to factory defaults as described in "Factory Config" on page 5.

4.5.6 Factory Config

The factory config option is used to restore the EN4232MR to its factory defaults.

Caution: Choosing factory config will erase all programmed point and output information, as well as the password.

To restore the factory configuration defaults to the EN4232MR:

1. From the install & service menu, use the up and down buttons to navigate to the "Factory Config" prompt; press the enter button.
2. The "Reset Config" prompt displays. Use the up and down buttons to choose "Y" for yes; press enter to select.
3. The "Config Reset" prompt displays; press the enter button to return to the install & service menu.

The receiver can also be brought back to the factory default configuration through a hardware initiated sequence.

1. Connect a wire between the reset terminal and the ground terminal.
2. While pressing the back button, cycle the power to the unit.
3. Release the back button and remove the wire between the reset terminal and ground.
4. "Reset Config?" displays; select "Y" and press the enter button.

5 US Patent Numbers

- 7,154,866
- 7,554,932
- 7,746,804
- Other patents pending

6 Specifications

UL compatible repeater, transmitters: EN5040-T, EN1215EOL, EN1215WEOL, EN1223D, EN1235SF, EN1235DF, EN1249, EN1261HT

Dimensions: 22cm x 18cm x 4cm (8.75" x 7" x 1.63").

Weight: 522 g (18.4 oz)

Operating environment: 0°- 60°C (32°- 140°F), 90% relative humidity, non-condensing.

Power requirement: 11-14 VDC; 500mA

Nominal current consumption: Approx. 120 mA

Output specifications: Form C relay 1A @ 28 VDC, 0.5 @ 30 VAC resistive load

Input specifications: Reset input: Contact closure, momentary low.

Receiver type: Frequency hopping spread spectrum.

Operating frequency: 915-928 MHz (Australia), 921-928 MHz (New Zealand), 902-928 MHz (USA)

Tamper: Type B, fixed device.

Number of points/Transmitters: 32.

Number of outputs: 12 Form C relay outputs

Event history log capacity: 50 events (first-in, first-out replacement).

UL listings: UL 365, UL 636, UL 1023, ULC/ORD-C1023-74, UL 1076, UL 1610.

7 Television and Radio Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

8 ADT Focus 200 Plus / Focus Cadet Control Panel Wiring and Programming Information

8.1 Typical EN4232MR Receiver Connection to ADT Focus 200 Plus / Focus Cadet Control Panel

EN4232MR Function	EN4232MR Terminal	Panel Terminal	Keypad Text
Power in (12V DC)	Vs	(19) + Aux Power	n/a
Ground	GND	(20) - Aux Power	n/a
Alarm 1	NC (1)	(25) Point 1	(user text)
(Follower)	C (1)	(26) Common	
	NO (1)		
Alarm 2	NC (2)	(27) Point 2	(user text)
(Follower)	C (2)	(28) Common	
	NO (2)		
Repeater AC Loss	NC (3)	(29) Point 3	RF Repeater AC
(Follower)	C (3)	(30) Common	
	NO (3)		
RF Pt Low Battery	NC (4)	(32) Point 4	RF Pt Low Batt
(Latching)	C (4)	(31) Common	
	NO (4)		
RF Pt Tamper	NC (5)		RF Pt Trouble
(Latching)	C (5)	(34) Common	
	NO (5)*	(33) Point 5	
RF Pt Inactive	NC(6)	(35) Point 6	RF Pt Inactive
(Follower)	C (6)	(34) Common	
	NO (6)		
Power Loss	POWER LOSS	(36) Point 7	RF Recvr Power
(Follower)		(37) n/a	
Receiver Tamper	NO (TAMP) *	n/a	
(Follower)	C (TAMP) *	n/a	
RF Jam	NC (JAM)	(38) Point 8	RF System Jammed
(Follower)	C (JAM)	(37) Common	

* Point 5 is normally open to allow RF Pt Tamper and Receiver Tamper on one loop. The 2K-ohm end-of-line resistor is connected across TAMP NO (normally open) and TAMP C (common)
Wire from TAMP NO to 5 NO.
Wire from TAMP C to 5 C.

8.2 ADT Focus 200 Plus / Focus Cadet Control Panel Zone Information

EN4232MR Output Function	Point #	Point Name	Point Type	Description	Option
Alarm 1	1				
Alarm 2	2				
Repeater AC Loss	3	RF REPEATER AC	13 (SPV)	Supervisory	
RF Point Low Battery	4	RF PT LOW BATT	13 (SPV)	Supervisory	
RF Point/Receiver Tamper	5	RF PT TROUBLE	1 (FI)	Fixed	2
RF Point Inactive	6	RF PT INACTIVE	13 (SPV)	Supervisory	
Receiver Power Loss	7	RF RECVR POWER	1 (FI)	Fixed	2
RF Jam	8	RF SYSTEM JAMMED	13 (SPV)	Supervisory	

8.2.1 Examples of programming for alarm points:

EN4232MR Output Function	Point #	Point Name	Point Type	Description	Option
Intrusion		Front Door	7 (MIC)	Movable Instant Chime	2
		or			
			8 (MDC)	Movable Delayed Chime	2
Holdup		Holdup	11 (HU)	Holdup	2

Note: For UL installations, the control panel must be programmed to indicate an alarm if the system is in an armed condition and an RF jamming signal occurs at the receiver.

9 Bosch D9412GV2 / D7412GV2 Control Panel Wiring and Programming Information

9.1 Typical EN4232MR Receiver Connection to Bosch D9412GV2 / D7412GV2 Control Panel

EN4232MR Function	EN4232MR Terminal	Panel Terminal	Keypad Text
Power in (12V DC)	Vs	(3) + Aux Power	n/a
Ground	GND	(9) Common	n/a
	NC (1)		
Alarm 1	C (1)	(12) Common	PT 1
(Follower)	NO (1)	(11) Point 1	(user text)
	NC (2)		
Alarm 2	C (2)	(12) Common	PT 2
(Follower)	NO (2)	(13) Point 2	(user text)
	NC (3)		
Repeater AC Loss	C (3)	(15) Common	PT 3
(Follower)	NO (3)	(14) Point 3	RF Repeater AC
	NC (4)		
RF Pt Low Battery	C (4)	(15) Common	PT 4
(Latching)	NO (4)	(16) Point 4	RF Pt Low Batt
	NC (5)		
RF Pt Tamper	C (5)	(18) Common	PT 5
(Latching)	NO (5)	(17) Point 5	RF Pt Trouble
	NC (6)		
RF Pt Inactive	C (6)	(18) Common	PT 6
(Follower)	NO (6)	(19) Point 6	RF Pt Inactive
Power Loss	POWER LOSS	(20) Point 7	PT 7
(Follower)		(21) n/a	RF Recvr Power
Receiver Tamper	C (TAMP) *	n/a	
(Follower)	NO (TAMP) *	n/a	
RF Jam	NC (JAM)	(22) Point 8	PT 8
(Follower)	C (JAM)	(21) Common	RF System Jammed

* Receiver Tamper and Transmitter Tamper can be combined on one loop.
Connect a 2K-ohm resistor from TAMP NO (normal open) to TAMP C (common).
Wire from TAMP NO to 5 NO.
Wire from TAMP C to 5 C.

9.2 Bosch D9412GV2 / D7412GV2 Control Panel Zone

	Point	Point	Point	Point	
EN4232MR Output Function	Assignment	Text	Type	Response	Options
Alarm 1	1				
Alarm 2	2				
Repeater AC Loss	3	RF REPEATER AC	0	3	Buzz on fault = 2
RF Point Low Battery	4	RF PT LOW BATT	0	3	Buzz on fault = 2
RF Point/Receiver Tamper	5	RF PT TROUBLE	2	3	Buzz on fault = 1
RF Point Inactive	6	RF PT INACTIVE	0	3	Buzz on fault = 2
Receiver Power Loss	7	RF RECVR POWER	2	3	Buzz on fault = 2
RF Jam	8	RF SYSTEM JAMMED	0	3	Buzz on fault = 1

9.2.1 Examples of programming for alarm points:

	Point	Point	Point	Point	
EN4232MR Output Function	Assignment	Text	Type	Response	Options
Intrusion		Front Door	1	1	
Holdup		Holdup	0	0	Silent bell = Yes

Note: For UL installations, the control panel must be programmed to indicate an alarm if the system is in an armed condition and an RF jamming signal occurs at the receiver.

10 DMP XR500 Control Panel Wiring and Programming Information

10.1 Typical EN4232MR Receiver Connection to DMP XR500 Control Panel

EN4232MR Function	EN4232MR Terminal	Panel Terminal	Keypad Text
Power in (12V DC)	Vs	(7) RED	n/a
Ground	GND	(10) BLK	n/a
	NC (1)		
Alarm 1	C (1)	(14) GND	Zone 1
(Follower)	NO (1)	(13) Z1	(user text)
	NC (2)		
Alarm 2	C (2)	(14) GND	Zone 2
(Follower)	NO (2)	(15) Z 2	(user text)
	NC (3)		
Repeater AC Loss	C (3)	(17) GND	Zone 3
(Follower)	NO (3)	(16) Z 3	RF Repeater AC
	NC (4)		
RF Pt Low Battery	C (4)	(17) GND	Zone 4
(Latching)	NO (4)	(18) Z 4	RF Pt Low Batt
	NC (5)		
RF Pt Tamper	C (5)	(20) GND	Zone 5
(Latching)	NO (5)	(19) Z 5	RF Pt Trouble
	NC (6)		
RF Pt Inactive	C (6)	(20) GND	Zone 6
(Follower)	NO (6)	(21) Z 6	RF Pt Inactive
Power Loss	POWER LOSS	(22) Z 7	Zone 7
(Follower)	GND	(23) GND	RF Recvr Power
Receiver Tamper	NO (TAMP) *	n/a	
(Follower)	C (TAMP) *	n/a	
RF Jam	NC (JAM)	(24) Z 8	Zone 8
(Follower)	C (JAM)	(23) n/a	RF System Jammed

* Receiver Tamper and Transmitter Tamper can be combined on one loop.
Connect a 2K-ohm resistor from TAMP NO (normal open) to TAMP C (common).
Wire from TAMP NO to 5 NO.
Wire from TAMP C to 5 C.

10.2 DMP XR500 Control Panel Zone Information

EN4232MR Output Function	Zone Number	Zone Name	Zone Type	DO Message	DO Output	DO Output Action	DS Message	DS Output	DS Output Action	AO Message	AO Output	AO Output Action	AS Message	AS Output	AS Output Action
Alarm Zone 1	1														
Alarm Zone 2	2														
Repeater AC Loss	3	RF REPEATER AC	Night	Trouble	1	Follow	Trouble	1	Follow	Trouble	1	Follow	Trouble	1	Follow
RF Point Low Battery	4	RF PT LOW BATT	Night	Trouble	1	Follow	Trouble	1	Follow	Trouble	1	Follow	Trouble	1	Follow
RF Point/Receiver Tamper	5	RF PT TROUBLE	Night	Trouble	1	Follow	Trouble	1	Follow	Alarm	0	Steady	Alarm	0	Steady
RF Point Inactive	6	RF PT INACTIVE	Night	Trouble	1	Follow	Trouble	1	Follow	Trouble	1	Follow	Trouble	1	Follow
Receiver Power Loss	7	RF RECVR POWER	Night	Trouble	1	Follow	Trouble	1	Follow	Alarm	0	Steady	Alarm	0	Steady
RF Jam	8	RF SYSTEM JAMMED	Night	Trouble	1	Follow	Trouble	1	Follow	Trouble	1	Follow	Trouble	1	Follow

Examples of programming for alarm points:

EN4232MR Output Function	Zone Number	Zone Name	Zone Type	DO Message	DO Output	DO Output Action	DS Message	DS Output	DS Output Action	AO Message	AO Output	AO Output Action	AS Message	AS Output	AS Output Action
Intrusion		Front door	Exit	Trouble	1	Follow	Trouble	0	Follow	Alarm	0	Steady	Alarm	0	Steady

Holdup		Holdup	Panic	n/a	n/a	n/a	n/a	n/a	n/a	Trouble	0	Steady	Alarm	0	Steady
Status List must not have panic zone keypads enabled															

Note: For UL installations, the control panel must be programmed to indicate an alarm if the system is in an armed condition and an RF jamming signal occurs at the receiver.
