

# TDL-FAB Fire Alarm Interface Board Installation Guide

## Features:

- Clean contact input from the fire alarm relay. A closed contact indicates the normal condition. An open contact indicates a fire alarm.
- Terminals for 12V power supply input.
- Two sets of power supply outputs. The outputs are turned off during a fire alarm.
- 10A fuse to protect the power supply outputs. The fuse holder accepts 20mm x 5mm fuses.
- Relay output for the monitoring of the fire alarm relay.
- Relay output for the monitoring of the fuse.
- LED indications for the power input, fire alarm input signal and power supply output protection fuse (located underneath the fuse)
- Quality rising clamp terminals (maximum cable size 2.5mm<sup>2</sup>)
- Fits the TDL Mounting Base.
- Board dimensions: 110mm x 60mm x 23mm

## Wiring:

